
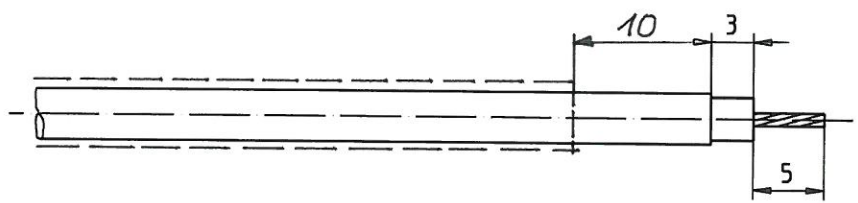


gesamt


Assembly instruction: 53 T2 Series: N

Straight connector
for semi-rigid cable


Cable entry:
Center contact - soldered
Copper jacket - soldered

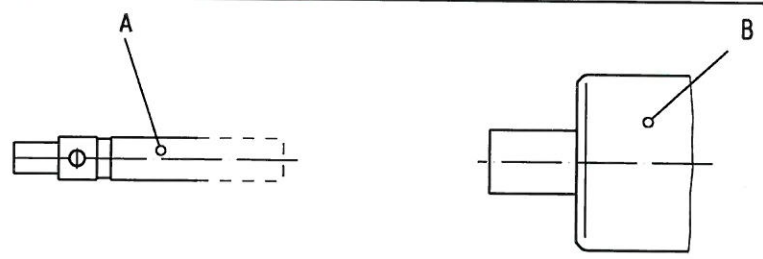

- 1) Prepare the cable according to the diagram.
In case of a FEP-jacket remove it to the shown dimension.

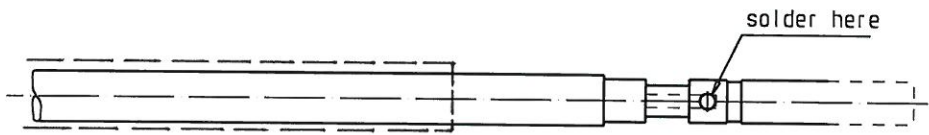

- 2) Slide center pin "A" over the inner conductor of the cable and solder it.

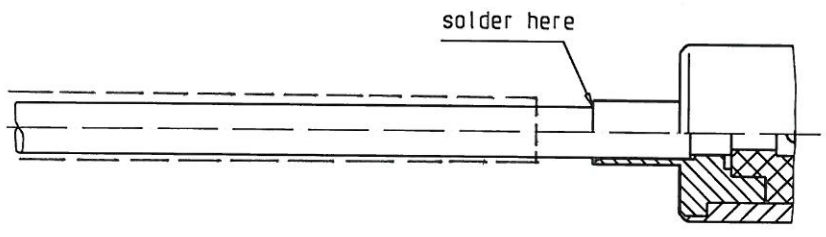

- 3) Insert the prepared cable into the connector body "B" until the center pin engages perceptibly.
- 4) Check the interface dimension. See the customer drawing of the relevant connector.
- 5) Solder the copper jacket to the connector body.

ruer diese technische Unterlage behalten wir uns alle Rechte vor. (DIN 34)

				Rosenberger Hochfrequenztechnik 84526 Tittmoning 			
6	07-0873	29.1.08	Da	Bearb.	28.05.96	Krautenb.Sa.	M 2:1
a	CAD-MTP	28.05.96	Kra.Sa.	Gepr.			Blatt 1/1
Zust.	Aenderung	Datum	Name				

Tools:	
Stripping tool
Soldering equipment

